

Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. Oneremote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.



## Congratulations

With the interface module EXT from [www.oneremote.dk](http://www.oneremote.dk) connected to your Kiss player and any Bang & Olufsen TV you can operate the receiver with your Bang & Olufsen remote control terminal.

This user guide tells you how.

## Plug and Play

The receiver can be connected directly to a vacant linkequipped AV socket on the Bang & Olufsen TV with the special EXT scart connection cable and adaptor.

Following the correct programming of the AV connection the receiver is ready to operate. For programming of the AV connection check the Bang & Olufsen TV User Manual.

If the Bang & Olufsen TV does not have a vacant useable AV socket a Oneremote AV Selector can be supplied.

## Bang & Olufsen Remote Controls

With your beocompatible\* receiver connected to a Bang & Olufsen TV you may operate it with your Beo4 or Beo5.




## Operation in a Beolink Videosystem

In a Bang & Olufsen Beolink videosystem full operability is ensured in all link rooms.

*\*Beocompatible means that the equipment can be operated with a Bang & Olufsen remote control when connected to a Bang & Olufsen TV.*












































## Operating with Beo4 or Beo5

Beo4 does not have as many keys as the original Kiss 1600 remote control. Thus certain Beo4 keys have got alternative functionality.

To get to this  has to be pressed first, i.e.  followed by  on a Beo4 corresponds to Power on the original remote control.


The table shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the receiver correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the receiver's user manual.

Beo4 / beo5	Funktion
 	Power *1 OK
 	Play (Press 1 second) Stop
 	HDD
 	DVD
 	Next
 	Previous
	CH+
	CH-
	Options
	Return
	Return
 	Title menu
 	Menu
 	Zoom
 	Subtitles
 	Erase
 	- / - -
 	Mark
 	Kiss Online
 	PC link
 	Setup
 	Angle
 	Power
 	Check

\*1

*Depending on the TV, the player can be connected as Vtape, Vmem, DVD, Vaux etc.*

*The button used in a setup we call the  button. There is therefore not button on the beo4 or beo5 named Source.*